


1

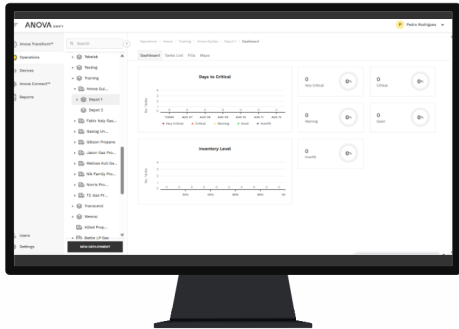


Click the New Deployment button.

If your account supports both Fuels & Lubricants and LPG, you'll see two options:

- **LPG** – Select this if the tank uses a float gauge.
- **Fuels and Lubricants** – Select this if installing a pressure sensor.


2

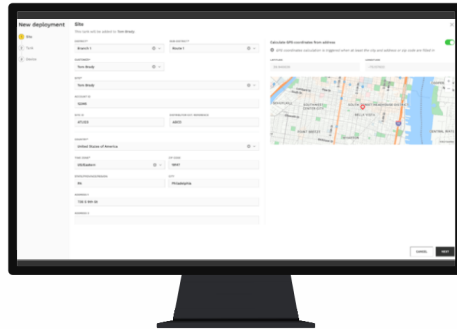

Begin by creating the site where the monitor(s) will be installed. A site can include multiple tanks and devices.

- **Subdivision:** Link the site to one of your company's subdivisions. If the subdivision doesn't exist, type its name and click Create.
- **Site Name:** Type the location name and click Create when the option appears. You may enter additional details, though they are optional. Click Next when ready.

3

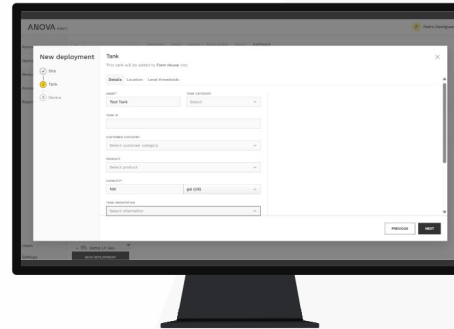


Set up the first tank. Only fields marked with a star (*) are required.

Use the Location and Tank Thresholds tabs to adjust the tank's position and alarm levels. If you don't change them, default settings will be used.

Click Next when you're done.

4

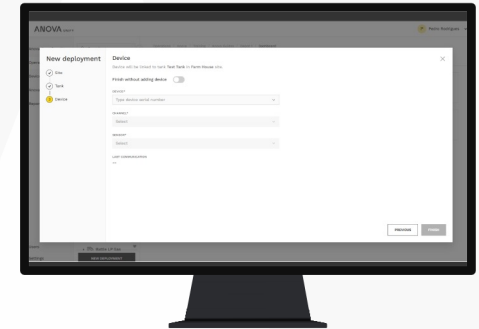

Add a Device. You may choose to finish without adding a device. Devices can be added later via the platform (see Associate a Device with a Tank) or in the field using Anova Go – Installation.

- To add a device now:
- Enter the device's serial number.
 - Select the correct sensor and its channel.
 - (Optional) Set multiple daily communication intervals if supported by the device.

Click Finish to complete the deployment.